



7. PROCEDURE FOR TRACK INSTALLATION ON PLASTERBOARD CEILING


1. Cut the track according to the design dimensions after removing the conductor runs. Cutting can be done at any place and angle. Cut the track with a miter saw.

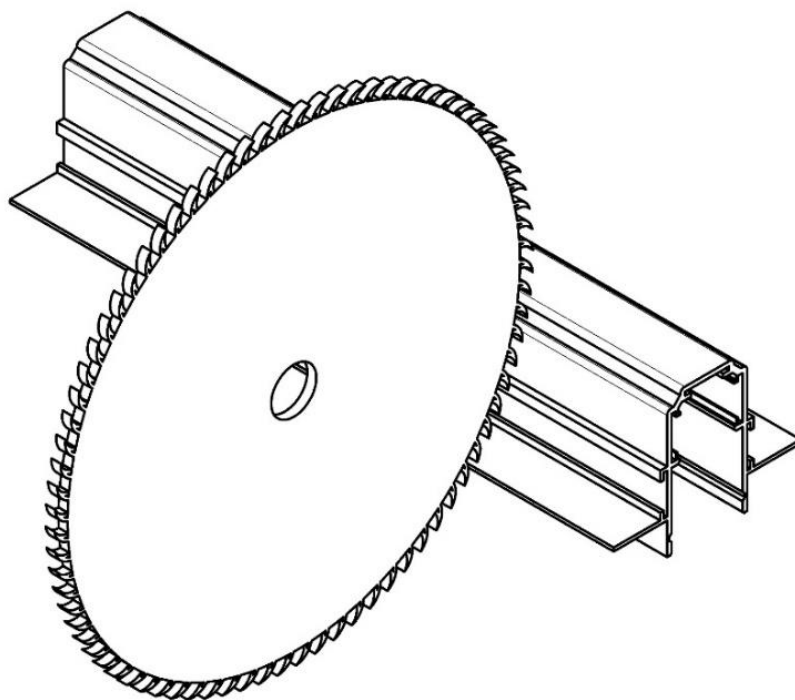


2. Shorten the conductor runs by 5mm, install them in the track and crimp their guides in the track.

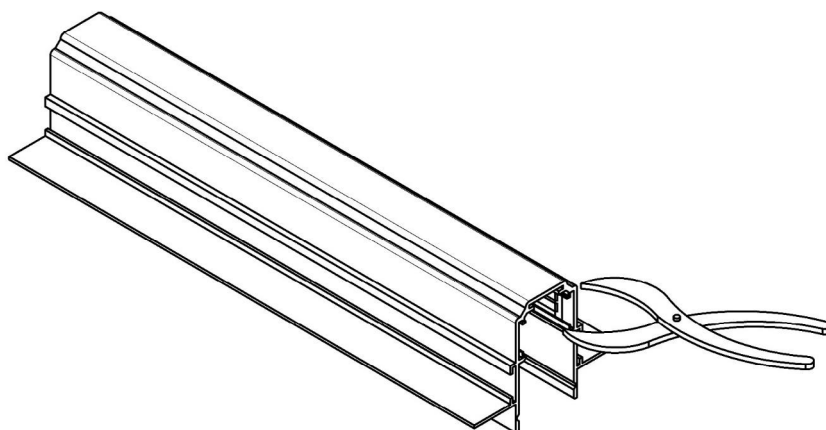


3. Drill the power cable entry holes and remove the chamfers.

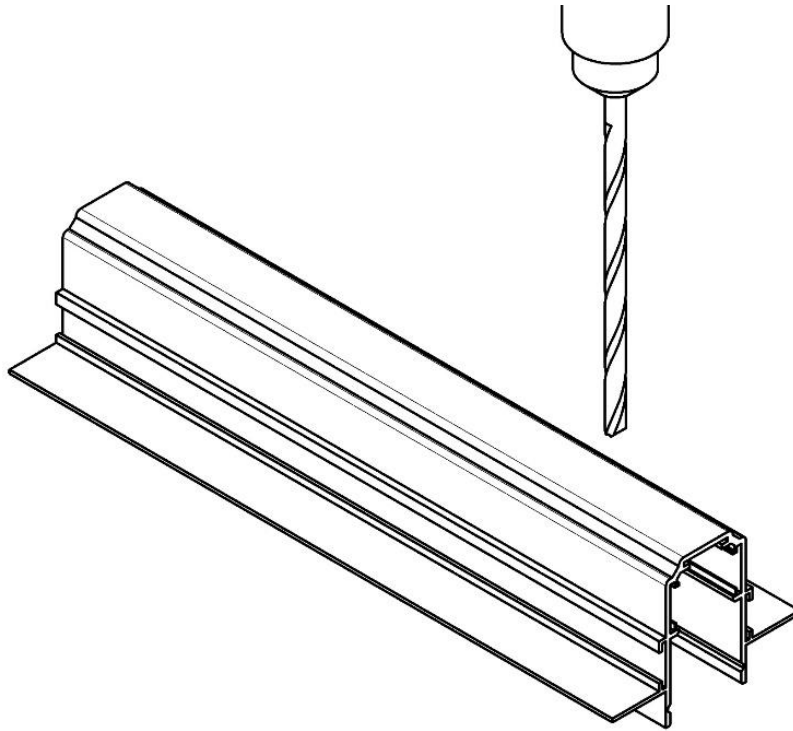


4. Connect the track sections using connectors and install the plugs. Pack the track in extruded polystyrene foam immediately after installation to protect it from deformation and dust during the remaining period of installation activities.

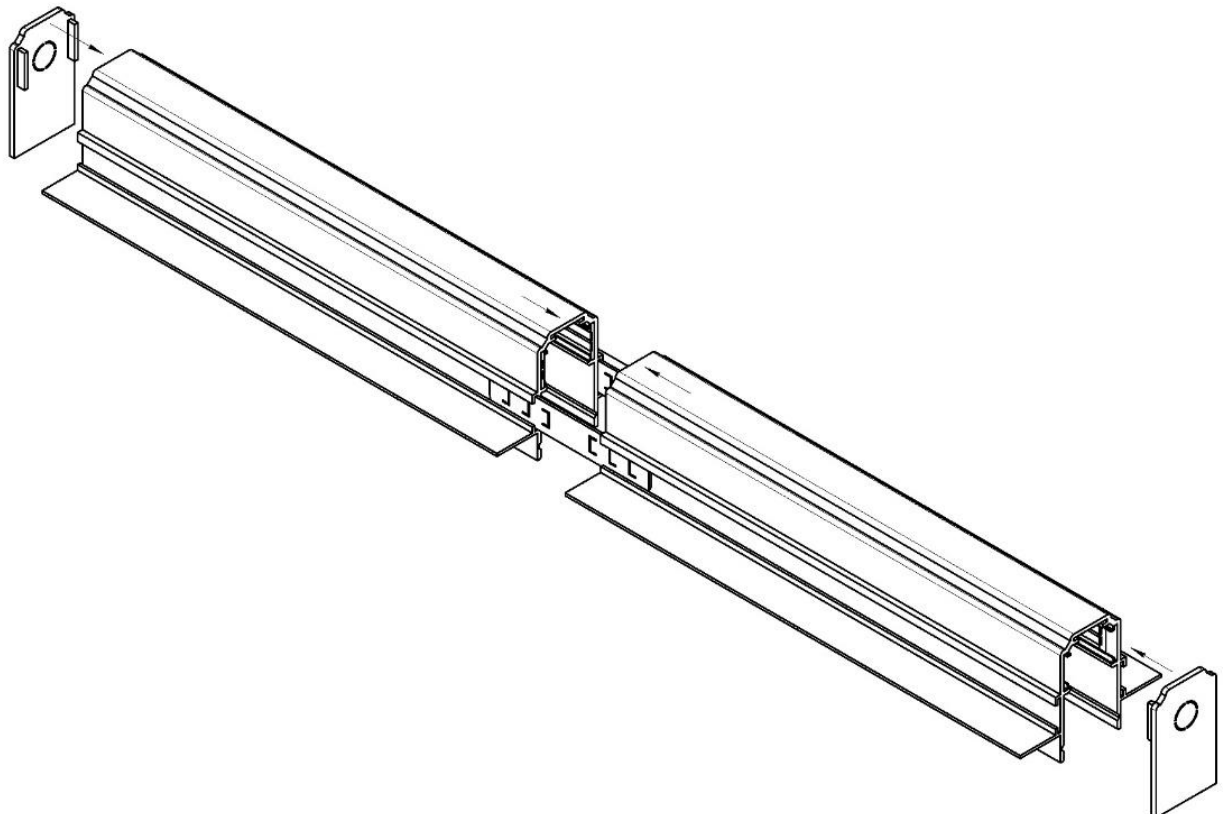


5. Install the ceiling profile in accordance with the required dimensions.

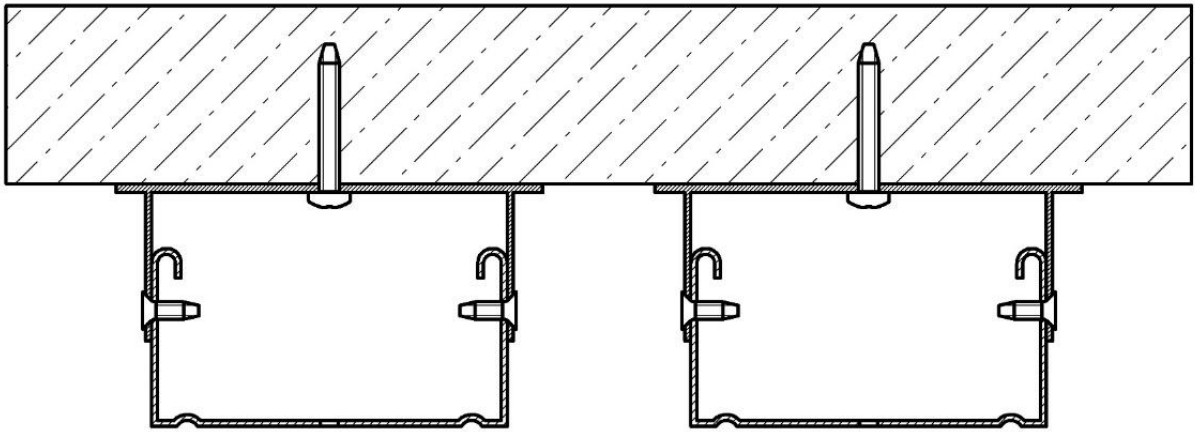

6. Insert the supply wire into the track and connect it to the power input or the recessed power supply.

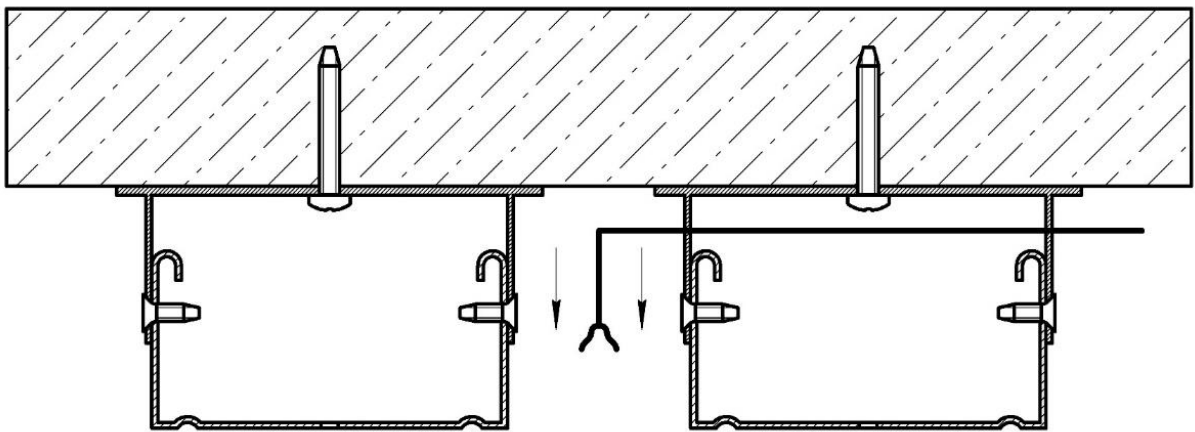

7. Install the track into the mounting slot and secure it with screws.

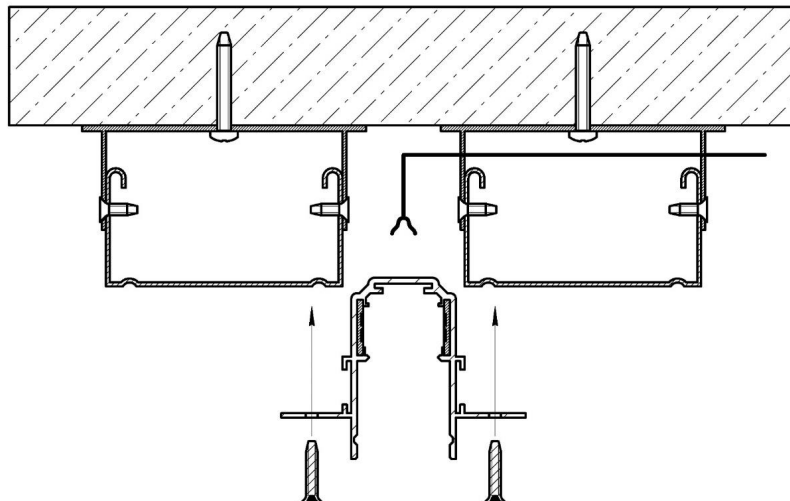

8. Install the plasterboard close to the track walls and secure it with screws. Bond a layer of fiberglass mesh. Cover the plasterboard with putty to make level with the track walls.

